



Listen Responsibly

of your BlueAnt device.

Protect your hearing by always listening at a safe level.

Prolonged use at high volumes may affect your hearing capacity and result in noise induced hearing loss. Please read the important safety information in this document for advice on the safe use


Fit

The best sound comes from the best fit. There are multiple sizes of ear tips included with the PUMP BOOST to ensure you get the best audio experience.

To change gels, squeeze the gel and push it onto the stem.

Using the Microphone and Remote Controls

Use the microphone and remote control on your headphone cable to adjust the volume, answer calls, and control music playback on selected devices. Please note that not all devices support all the functions of the remote and microphone.

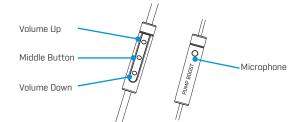

Answer or end a call Click the middle button once. Decline an incoming call Hold down the middle button for about 2 seconds, then

Use the middle button to control your music and calls:

Skip to the next track

	that you have declined the call.
Use call waiting	Click the middle button once to put the current call on hold and switch to an incoming or held call.

Use call waiting	Click the middle button once to put the current call on hold and switch to an incoming or held call.
Play or pause a song or	Click the middle button once. Click again to resume.

	hold and switch to an incoming or held call.
Play or pause a song or	Click the middle button once. Click again to resume.

Double click the middle button.

10:	DO TRIS:	
Fast forward through the current track	Double click and hold the middle button. Release the button to stop fast forwarding.	
Go to the previous track	Triple click the middle button.	
Rewind the current track	Triple click and hold the middle button. Release the button to stop rewinding.	
Use Voice Control	Hold down the middle button until you hear a beep to indicate that voice control has been activated.	
NOTE: "Click" means quickly press and release the button.		

Specifications

Driver Diameter

Supported By

Frequency Range	20 Hz to 20 kHz
Sensitivity	104 dB SPL at 1kHz
Impedance	26 Ω

Max Power 20 mW

Microphone and iPhone 4 and above, iPod shuffle 2rd gen and above, iPod Remote Controls Touch, iPod Nano 4th gen and above, iPad 2 and above

15 mm Woofer 7mm Tweeter

Made for iPhone iPad

"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance. Made for:

iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

SAFETY INFORMATION AND WARRANTY TERMS

Important Safety Information

PLEASE READ THIS ENTIRE DOCUMENT CAREFULLY, BECAUSE IT CONTAINS IMPORTANT INFORMATION ABOUT THE SAFE USE OF BLUEANT DEVICES

WARNING - PROTECT YOUR HEARING BLUEANT DEVICES CAN

REACH VOLUMES ABOVE 100 DECIBELS.

PROLONGED USE AT HIGH VOLUMES MAY AFFECT

YOUR HEARING CAPACITY AND MAY RESULT IN NOISE INDUCED HEARING LOSS (NIHL).

TURN OFF THE POWER TO YOUR DEVICE WHEN NOT IN USE.

Please ensure that the device and any associated components such as ear gels or chargers are stored safely and that any packaging or unwanted contents are disposed of thoughtfully. Do not place the product on the floor or leave it in a place where young children could access it, or someone could trip over it.

Using Ear Gels

Your BlueAnt headset will come with ear gels or foam tips that are designed to provide a secure fit in your ear while providing high quality audio.

 Ear gels and tips are designed to sit comfortably in your ear and should not be forced into your ear at any time. If you have trouble fitting the ear gel or foam please refer to the owner's manual for correct insertion and usage information. Always make sure that the ear gel or foam is fitted securely to your device before placing it in your ear.

WARNING

NOTE THAT NON-

COMPLIANCE. MISUSE OR FORCING THE FAR GEL OR FOAM MAY CAUSE DAMAGE TO YOUR FAR CANAL OR EARDRUM. OR MAY OTHERWISE CAUSE **BODILY HARM**

Care and Handling

Your BlueAnt device is a precision engineered instrument. To ensure its ongoing performance, you should look after it as you would any quality consumer electronic product, and use it in accordance with the instructions.

BlueAnt recommends that you take the following precautions.

- Avoid leaving your device in direct sunlight, such as on the dashboard or console of a car or truck. Do not leave your device unattended in your vehicle.
- Do not leave your device, or use your device, in any area where the temperature may exceed 60 degrees Centigrade (140 degrees Fahrenheit), such as inside a closed car on a hot day. Remember that on a hot day the temperature inside a closed car may be significantly higher than the outside air temperature.
 - Do not leave your device, or use your device, in any area where the temperature is likely to drop below 0 degrees Centigrade (32 degrees Fahrenheit).

- Do not leave your device, or use your device, in any area exposed to humidity, dust, soot, other foreign objects, smoke, or steam as this may cause your device to malfunction.
- Do not use any household or industrial grade detergents or cleaners to clean your device. If your device becomes dirty or smeared, in most instances a wipe with a dry or slightly damo cloth should be sufficient to clean it.
- Should a fault develop with your BlueAnt product, contact BlueAnt for advice on how to proceed.
 Do not attempt to repair or alter any BlueAnt product yourself.

PROPOSITION 65 WARNING

THIS PRODUCT CONTAINS CHEMICALS KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER, BIRTH DEFECTS, AND/OR OTHER REPRODUCTIVE HARM.

Caring for the Environment by Recycling

(Applicable in the European Union and



other European countries with separate collection systems)

This symbol on a BlueAnt product or its literature

indicates that it should not be disposed of with other household waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial waste for disposal.

Recycling BlueAnt Products

Do not dispose of your BlueAnt product with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic

waste items, and may prohibit or restrict how such items are disposed of. Check the laws and regulations for your areas to determine how to properly dispose of such items. Contact your regional authorities for more details. If collection systems are not available, please return unwanted accessories to any BlueAnt Approved Service Center for your region.

BlueAnt Limited Global Warranty

This product is covered by BlueAnt's limited global warranty for one (1) year from the date of purchase by the first consumer purchaser of the Product.

Please refer to warranty.blueantwireless.com for full terms and conditions.

THANK YOU FOR CHOOSING A BLUEANT PRODUCT.

AUSTRALIAN CONSUMER LAW

BlueAnt Wireless

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure.

For warranty and technical support please visit www.hlueantwireless.com or call 1300 669 049

1-7 Weston St. Brunswick, Victoria, 3056, Australia



BlueAnt